



National Dredging Quality Management Program

QUICK GUIDE: DQM VIEWER – HOME PAGE

Show/Hide Buttons
Home, Select Data, & Print.

Home
Return to Home view shown here.

Select Data
Displays the Selectron to select and view data.

Print
Exports map to JPG.

Basemap
Displays all active hopper dredges, scows, & pipelines.

View Active Project
Click on a location icon on the map to view current project information.

About
Displays User Agreement.

Zoom in
Click **+**, scroll mouse wheel up.

Zoom out
Click **-**, scroll mouse wheel down.

Pan/3D View
Acts as a single toggle button: The small triangle displays in the active button.

Pan
Click **+**, position pointer, press and hold down left mouse button, and drag the map.

3D
Click **3D**, position pointer, press and hold down left mouse button, and drag:
Up = 3D, Down = 2D
Left/Right = change map orientation

Reset Map Orientation
Reset orientation to north.

Viewer Guide
Plays a short, looping video that provides basic information about current screen or task.

Layer Controls
Displays the list of available map layers.

Map Legend
Identifies colors used for each dredge plant type.

Layer Type	Color
Hopper	Purple
Scow	Blue
Pipeline	Yellow

Active Projects

Vessel Locations	
Hopper	Purple
Scow	Blue
Pipeline	Yellow

Hopper - XXXXXX

Project Name	Houston Ship Channel
Contract	XXXXXXXX-XX-X-XXXX
Contract Start	2/25/2020 17:56:40 PM GMT
Last Data Recorded	3/10/2020 17:13:51 PM GMT
Last Load	225
Position Lat/Lng	29.347460, -94.754193

Browse Project
View Current Track

Other Layers
Default Layers
LRL Layers
NAE Layers
SAC Layers
SAJ Layers
SAM Layers
SAS Layers
Dredge Health

FILTER POINTS - ON