



National Dredging Quality Management Program

QUICK GUIDE: DQM VIEWER – Displaying Additional Layers

- 1** **Open the Layer Controls Panel**
Click the Layer Controls tab to slide it open from the right side of the Viewer. To close the panel, click the tab again.



Use slider bars to control transparency of each layer.

- 2** **Working with Layers**
Use the following techniques to work with the Layer Controls panel:

Expand a Layer Category

All layer categories are collapsed by default. Click the  icon to expand and display a list of included layers.

Example: Default Layers includes seven layers: Borrow Areas, Channel Framework, IENC, NOAA, Placement Areas, Vessel Path, and World Boundaries.

Collapse a Layer Category

Click the  icon to collapse the category.

Display a Layer

Click the  icon to display a layer. The icon changes to .

Hide a Layer

Click the  icon to hide a layer. The icon changes to .

Display a List of Layer Features

Click the  icon to display a list of layer features.

Collapse a List of Layer Features

Click the  icon to collapse the list of layer features.

Display a Feature

Click the  icon to display a feature on the map. The icon will change to .

Hide a Feature

Click the  icon to hide a feature on the map. The icon will change to .

Filtering Points
Under Dredge Health Category, click  to filter positions reported as zeros (0). Click  to turn filtering off.

